

Kaiser Washing Machine Error Codes
KAISER

E01 - no signal to close the hatch: washing will be stopped.

E02 - the machine signals that the tank filling time has exceeded 2 minutes. The system continues washing.

E03 - water drain exceeded 1.5 minutes.

E04 - the machine signals about the problem of water filling (tank overflow). The system then stops washing and turns on the drain pump.

E05 - water filling problem. If after 10 minutes there is no signal from the "Nominal level" sensor, the machine stops washing.

E06 - drain problem. If after 10 minutes there is no signal from the "Tank empty" sensor, the machine stops washing.

E07 - water leakage into the sump.

E08 - the parameter of the supply network does not correspond to the norm. Manufacturers recommend a voltage of 190-253 volts.

E11 - a malfunction of the hatch lock was detected.

E21 - error in the operation of the drive mechanism system. Washing stops.

E22 - The drive motor rotates by itself, without a start command.

E31 - temperature sensor malfunction (most likely, this was preceded by a short circuit in the circuit).

E32 - temperature sensor malfunction (open circuit).

E42 - malfunction, the hatch was blocked within 2 minutes after washing.