

Actron Air Conditioner ESP Error Codes

0 Cooling Mode

1 Heating Mode

2 Heating compressor run time >20mins

3 Heating Defrost

4 Low speed (flashes every 30 seconds) Over Heat or Anti Freeze protection mode (reduced capacity mode)

5 Heating Mode - indoor coil pre-heat

6 E6 Fault discharge temperature

7 E7 Fault outdoor coil sensor (open or closed circuit)

8 E8 Fault outdoor discharge sensor (open or closed circuit)

9 E9 High or low pressure - phase error (3 phase models only)

E2 Fault indoor coil out sensor

E3 Fault room sensor(s) (open or closed circuit)

E4 Fault indoor coil sensor (open or closed circuit)

E5 Communication fault