

Actron Air M series Error Codes

1 Heating Mode

2 Heating Mode after 20 minutes of compressor run time

3 Heating Mode de-ice cycle

5 Heating Mode indoor coil pre-heat after defrost

7 E7 Fault outdoor coil sensor (open circuit)

8 E8 Fault outdoor coil sensor (closed circuit)

9 E9 Fault high or low pressure tripped (some models have discharge sensor, which will also give the same fault code)

E5 Communication error between outdoor and indoor