

Admiral AAV series washing Machine Error Codes

Don't fill

- Check fuse or reset circuit breaker.
- Turn the control dial to proper cycle and restart the washer.
- Turn both faucets on fully.
- Straighten inlet hoses.
- Disconnect hoses and clean screens. Hose filter screens may be plugged.

Won't Agitate

- Check fuse or reset circuit breaker.
- Make sure the lid is completely closed.
- Turn the control dial to proper cycle and restart the washer.
- Pauses are normal. Wait and see if the washer will start again.

Won't Spin or Drain

- Check fuse or reset circuit breaker.
- Straighten drain hoses. Eliminate kinked hoses. If there is a home drain restriction, call for drain service.
- Close lid and restart the washer. For your safety, washer will not spin unless the lid is closed.
- Suds lock - caused by too much suds. Rewash without detergent. Use correct amount of a low-sudsing detergent.

Load is Wet

- Unevenly distributed load. Redistribute the load, close the lid and restart the washer. Check for leveling. Be sure water level is acceptable for load size.

Stops

- Plug cord into live electrical outlet.
- Check fuse or reset circuit breaker.
- Close lid and restart the washer. For your safety, washer will not agitate or spin unless lid is closed.
- This may be a pause in the cycle. Wait briefly and it may start

Leaks Water

- Make sure hose connections are tight.
- Make sure end of drain hose is correctly inserted and secured to drain facility.
- Avoid extended soaking - soak for 30 minutes or less.
- Avoid overloading.

Noisy

- Be sure washer is leveled properly as outlined in installation manual.
- Weak floors can cause vibration and walking.
- Operating sounds will vary depending on agitation speed.

Fills with the Wrong Temperature Water

- Turn both faucets on fully.
- If equipped with a temperature selector dial, be sure it is set directly on a temperature setting and not between settings.
- Make sure temperature selection is correct

- While the washer is filling, you may notice just hot and/or just cold water entering the tub when cold or warm wash temperatures are selected. This is a normal function of the Automatic Temperature Control Select models) feature as the washer determines the temperature of the water.

- If Auto Temperature Control (select models) is selected, cold water may feel warmer than cold water from the tap.

- Make sure hoses are connected to correct faucets and inlet connections. Be sure water supply is regulated correctly. Flush water line before filling washer.

- Check the water heater. It should be set to deliver a minimum 120° F (49° C) hot water at the tap. Also check water heater capacity and recovery rate.

- Disconnect hoses and clean screens. Hose filter screens may be plugged.

Cycle Selector Advances Trough Off

- Extra Rinse (select models) is selected.