


# SANYO

## INSTRUCTION MANUAL

AWD-D700T  
AWD-D700VT

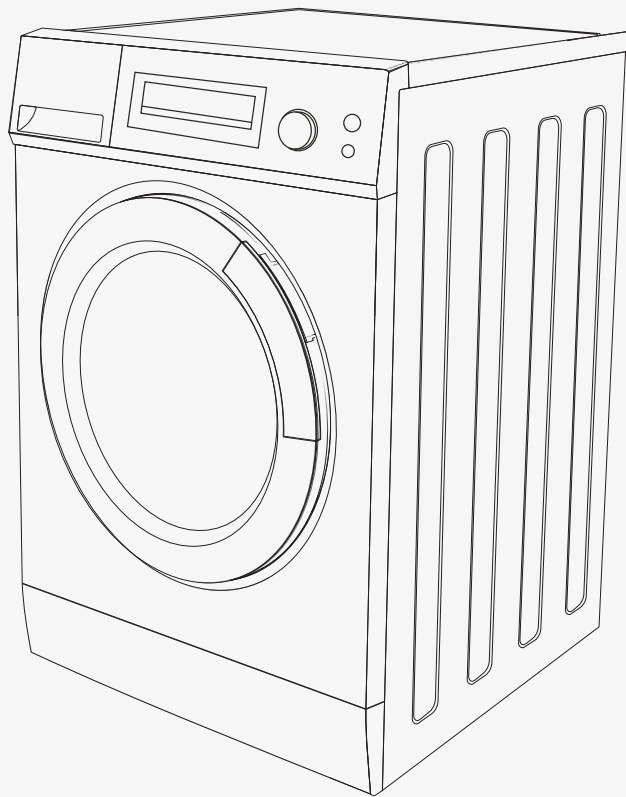

**Before operating this washing machine, please read these instructions carefully and completely.**

# CONTENTS

SAFETY NOTICE	2
NAME OF PARTS	3
ACCESSORIES	3
LOCK AND UNLOCK THE DOOR	4
USAGE INSTRUCTION FOR DETERGENT CASE	4
NAMES AND FUNCTIONS OF CONTROL PANEL	5~6
NORMAL USAGE	7
HOW TO USE THE CUSTOM PROGRAM	7~8
HOW TO USE THE WOOL PROGRAM	8
HOW TO USE THE BLANKET PROGRAM	9
HOW TO USE THE PRESET COURSE	10
COURSE CHOOSING GUIDE	11
CARE AND MAINTENANCE	12~13
VARIOUS FUNCTIONS	
CHILD LOCK FUNCTION	14
HOW TO DELETE THE END BUZZER	14
PRE-WASH FUNCTION	14
INTELLIGENT UNLOCK FUNCTION	14
HOW TO DRAIN REMAINING WATER	14
WASHING TIPS	14
NO TROUBLE CONDITIONS	15
TROUBLE SHOOTING GUIDE	16
INSTALLATION INSTRUCTIONS	17~19
SPECIFICATIONS	20

# SAFETY NOTICE (be sure to observe)

- To protect the user and other people's health and property, be sure to observe the following safety notice.

## WARNINGS

### ● Possible danger of electric shock.

1. Use special-purpose socket with rated current of washer and with fine ground connection.
2. Hold firmly the plug when plug in and pull out it. Don't use the damaged electrical cord. Use dry cloth to clean the plug when it is dirty.
3. Do not use wet hands to insert or pull out the plug.
4. Pull out the plug when the machine is after operation, under repair or in cleaning.

### ● Possible danger of fire or electricity leak.

1. Do not let the washer near fire, or put lighted cigarettes, candle, and other volatile materials on the machine.
2. Do not pour water over the panel.
3. Do not put the washing machine in very wet places or water dripping places.
4. Check the drain hose is placed correctly, so that water drains out smoothly.

### ● Possible danger of burn caused by high temperature.

1. The glass door becomes hot in process of high-temperature washing. Do not touch the door when the machine is on, especially children.
2. Keep kids and pets far away from the machine during operation.
3. If you need to open the door during high-temperature washing program, wait until the temperature drop to safe standard, and the door unlocked automatically.

### ● Possible danger of body injure.

1. Packing material may be dangerous to kids, please keep all packing material (plastic bag foam etc) far away from the kids.
2. This machine is not intended for use by persons (including kids) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety.
3. Kids are forbidden to play with the washing machine. Keep pets far away from washing machine.

### ● Possible danger of washing machine damage.

1. Do not put heavy things on the washing machine.
2. Two people are required in moving or transportation.
3. Water temperature could not exceed 60°C in the washing process.
4. Only professional serviceman could repair or remold the washing machine.

### ● Possible danger of explosion.

1. Do not wash flammable clothes stained with kerosene, gasoline, thinner, etc.
2. Do not operate the machine when there is gas leak.


### ● Please note:

1. Please check the water level before opening the door in order to avoid water outflow.
2. Never load machine beyond capacity.

### ● Possible danger of clothes damage.

1. Do not wash waterproof clothes, for example: raincoat, feather goods, sleeping bag, etc.
2. Your washing machine is only for home use and is only designed for the textiles suitable for machine washing.

# NAME OF PARTS

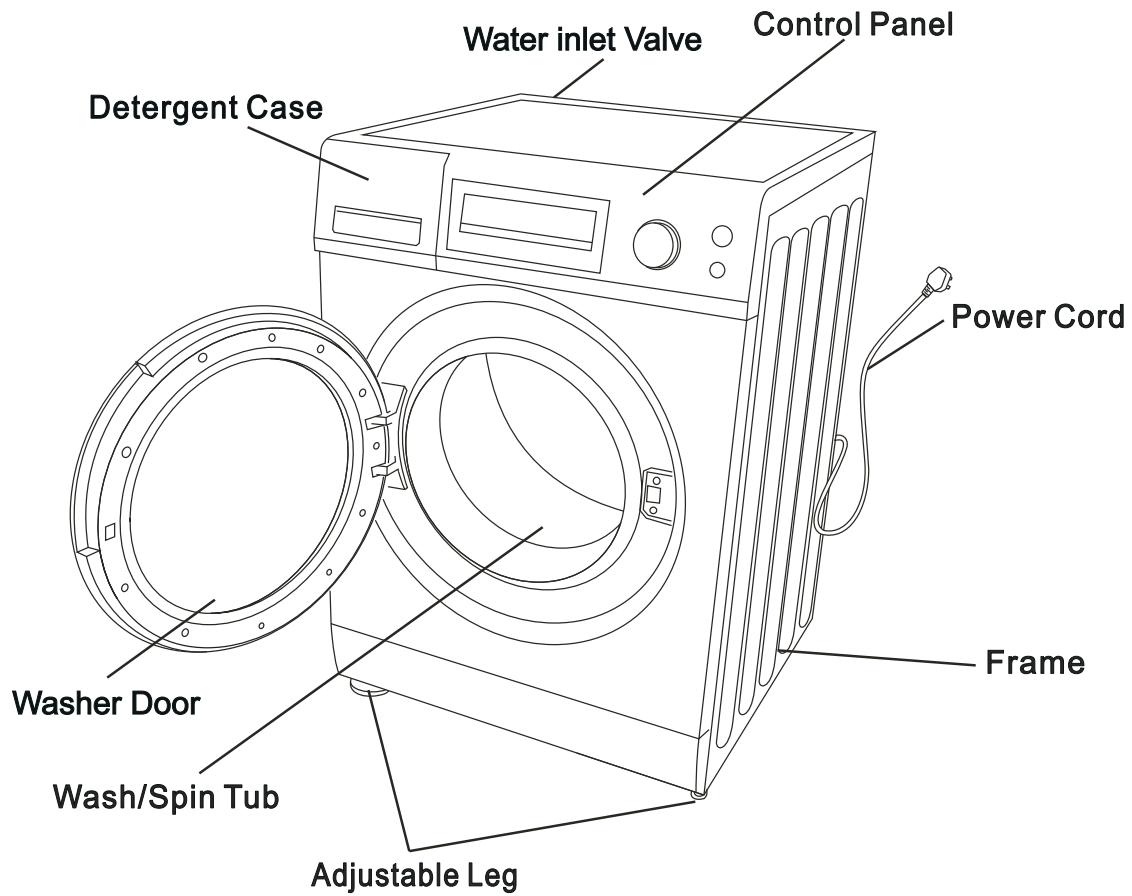

# ACCESSORIES

Instruction manual	Water Supply Hose	Lid (4Piece)	Spanner	Drain Hose	Magic Hose Joint
				 Hose Band	
Screw(4)					

# LOCK AND UNLOCK THE DOOR

## Lock the door

The door will be locked automatically when the machine gets started, and the

 light will turn on at the time.

## Unlock the door

When the  light is on, press START/PAUSE button, the Wash/Spin tub stop, then the door will be unlocked after 2 minutes.

- The door will be unlocked after 2 minutes if you directly pulled out the electrical plug.
- Foam spill over if you open the door during washing process, use towel to clean it.
- The door can not be unlocked in high temperature or high water level.

## USAGE INSTRUCTION FOR DETERGENT CASE

### Powder synthetic detergents

- For the undissolved detergents, for example: powder state soap, dissolve it in advance, then pour into the case.

### Liquid detergent and Bleach


- Use low bubble liquid synthetic detergents.
- For the concentrated liquid detergents, diluted it double times with water, then pour into the case.

### Softener

- Put into the case before washing, it will be poured into the tub automatically at the last round of rinse.
- For the concentrated detergents, use corresponding proportion of water to dilute it, then pour it into the case.
- No exceed to the full mark line.

### Pre-wash detergents

- Detergents can be poured in this case to ensure the wash performance when QUICK/HEAVY DUTY program is chosen.

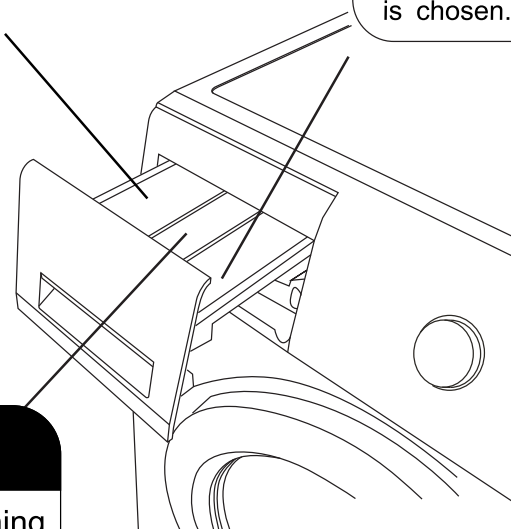

- High bubble Washer powder or detergent is forbidden.
- Use the detergent in accordance with the instruction by its manufacturer.
- Excessive detergents will cause too much bubble and affect the rinse, also create function faults.
- Choose suitable detergents in accordance with the type and color of clothes, the water temperature and the stain.

# NAMES AND FUNCTIONS OF CONTROL

## Indication

- This indicator shows settings, including water temperature, wash time, rinse time, spin time, spin speed, etc.
- This indicator shows remaining time during washing. (E.g) remaining time is 1 hour and 18 minutes
- When abnormal conditions occur, the indicator will indicate warning.

1:18

F

- Pre finis



## TEMP. button

- Press this button to choose the temperature of water according to the type of clothes and stain.
- Scope of temperature set is different as the course changes, some course have no water temperature set.

## COURSE button

- You can set the wash time, rinse times and spin time freely according to your need.

## SPIN SPEED button

- Indicate spin speed automatic in accordance with the types of course.
- Set the speed according to your need, some course limit the speed set.

# PANEL

## PRESET button


Press this button to preset the wash time of washing.

## PROGRAM knob

- Choose the right course according to the type and stained of clothes.

## START/PAUSE button

- This button can be used to start the washer operation.
- This button can also be used to temporarily stop the washer operation.

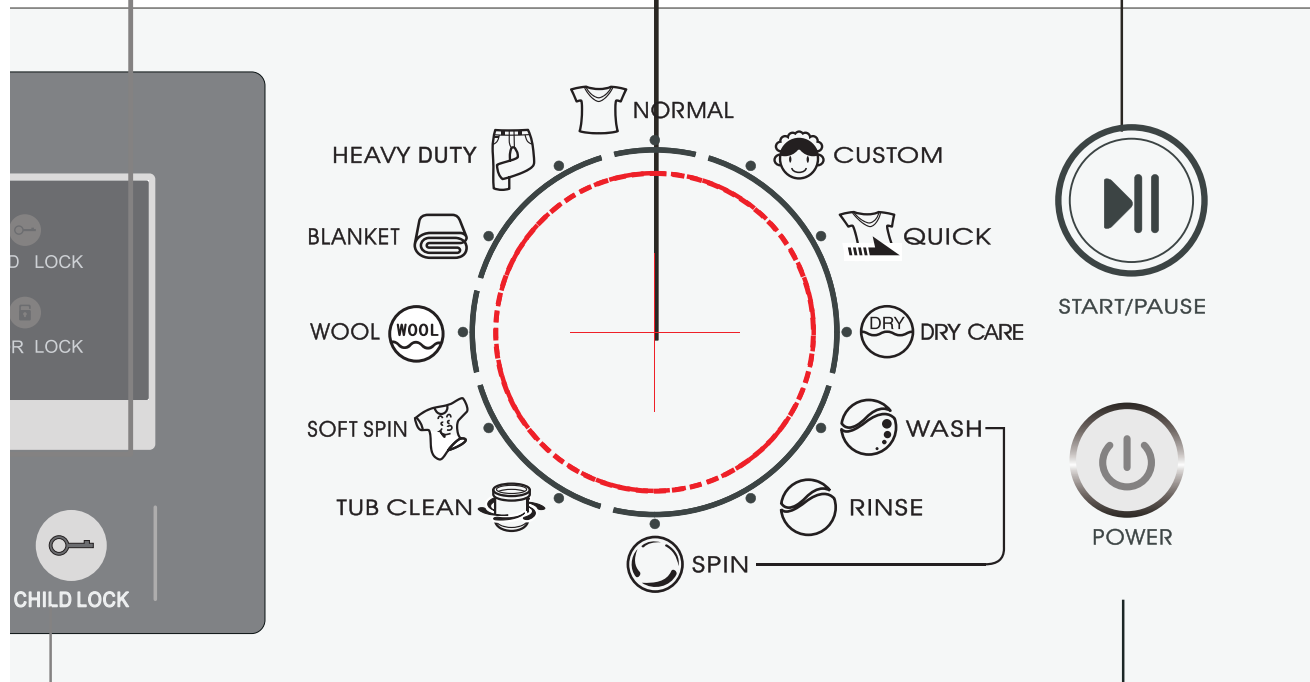

on

ally  
of  
our

## CHILD LOCK button

- Child lock can be set to prevent children from getting into the tub.
- The door will be locked either in working or power off.


## POWER ON/OFF button

- Press this button to turn on/off the power.
- When washing has finished, the power will be turned off automatically.


## NORMAL USAGE

### 1.Preparation:

- Load the laundry into the washer. Close the washer door.
- Put the detergent and softener into the Detergent Case.
- Connect the Drain Hose. Connect the Water Supply Hose to the faucet and turn the faucet on. Plug the Power Cord into a socket-outlet.

2.Press the  button to turn the power on.

3.Twist the PROGRAM knob and choose the NORMAL, HEAVY DUTY, SOFT SPIN , QUICK, DRY CARE program.

4.Touch the  button, the washer will start the washing operation.

5.At the end of operation, the buzzer will sound.

- Wash and Spin capacity below 2.7 kg in the “DRY CARE” program.
- Wash and Spin capacity below 2.0 kg in the “QUICK” program.

## HOW TO USE THE CUSTOM PROGRAM

You can set wash time, water temperature, rinse times, spin time, spin speed and adjust operating time freely according to your habit or laundry.

### 1.Preparation:

- Load the laundry into the washer. Close the washer door.
- Put the detergent and softener into the Detergent Case.
- Connect the Drain Hose. Connect the Water Supply Hose to the Water tap and turn the Tap on. Plug the Power Cord into a socket-outlet.



---

2. Press the  button to turn the power on.


---

3. Twist the PROGRAM knob to select the CUSTOM program.

---

4. Touch | TEMP | WASH | RINSE | SPIN | SPEED | button to set wash time, rinse times, spin time, spin speed and water temperature.

---

5. Touch the  button, the washer will start the washing operation.

---

6. At the end of operation, the buzzer will sound.

## HOW TO USE THE WOOL PROGRAM

For washing delicate and woolen clothes. They shall be washed as required in the labels.

1. Preparation:


- Load the laundry into the washer. Close the washer door.
  - Put the detergent and softener into the Detergent Case.
  - Connect the Drain Hose. Connect the Water Supply Hose to the Water Tap and turn the Water Tap on. Plug the Power Cord into a socket-outlet.
- 

2. Press the  button to turn the power on.

---

3. Twist the PROGRAM knob to select the WOOL program..

---

4. Touch the  button, the washer will start the washing operation.

---


5. At the end of operation, the buzzer will sound.

- Wash capacity should be below 2.0kg.
- Take out the clothes in time when program ends, and hung to dry the clothes, in case the clothes become distortion.
- No wash preset.
- Water temperature should not exceed 30°C to prevent distortion.
- Wash the white or bright-colored clothes separately from the dark-colored clothes.
- Use special detergent for wool to relieve damage of clothes, and improve the wash effect.


# HOW TO USE THE BLANKET PROGRAM

For washing blanket and other bulky items.

1. Fold the blanket

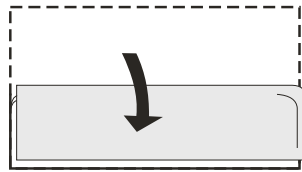


Fold in two by the short side

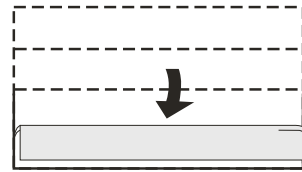

Fold once again in the same direction

2. Put blanket into the wash/spin tub.

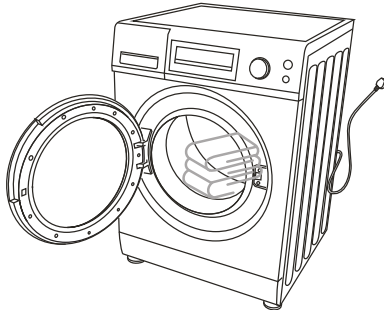


3. Preparation:

- Close the washer door.
- Put the detergent into the Detergent Case.
- Connect the Drain Hose. Connect the Water Supply Hose to the faucet and turn the Water tap on. Plug the Power Cord into a socket-outlet.

4. Press the  button to turn the power on.

5. Twist the PROGRAM knob to select the BLANKET program.

6. Touch the  button, the washer will start the washing operation.

7. At the end of operation, the buzzer will sound.

- Do not use net bag for the machine washable blanket, otherwise the washer vibrates abnormally and will be damaged in the spin process.
- Do not tweak or roll clothes into a boll before put them into the tub.
- Electric blanket and carpet are forbidden of wash.
- 100% villous and the long-villous blanket are forbidden of wash.
- Wash capacity of 100% synthetic fiber below 2.7kg.
- Wash capacity of 100% cotton blanket below 2.0kg.
- Water temperature should not exceed 30°C.

# HOW TO USE THE PRESET COURSE

The preset time means that when the washing is finished.

1. Preparation:


- Load the laundry into the washer. Close the washer door.
- Put the detergent and softener into the Detergent Case.
- Connect the Drain Hose. Connect the Water Supply Hose to the faucet and turn the faucet on. Plug the Power Cord into a socket-outlet.

2. Press the  button to turn the power on.

3. Twist the PROGRAM knob to select the desired program course.

4. Touch | TEMP | WASH | RINSE | SPIN | SPEED | button to set wash time, rinse times, spin time, spin speed and water temperature.

5. Touch the | PRESET | button to set the finishing time of washing.

6. Touch the  button, the washer will start PRESET course.

7. At the end of operation, the buzzer will sound.

- PRESET function could not be used for WOOL and TUB CLEAN course.
- To change the preset time, please press POWER ON/OFF button, restart from step 2.
- To cancel the preset, press POWER ON/OFF to shut off the electrical power.
- To check the preset procedure, press PRESET button, the washer will show you the current preset setting for 5 seconds.
- The actual ending time maybe different from the preset time as the different of water pressure, drainage, type of clothes, water temperatures, etc.
- One minute after preset is started, only the PRESET light will be on.

# COURSE CHOOSING GUIDE

COURSE	WATER TEMPERATURE (°C)	WASHING TIME(min.)	RINSE TIMES	SPINING TIME(min.)	SPINING SPEED (rpm)	TOTAL TIME(min.)
NORMAL	30 (Cold water, 20,30,40,60)	30 (10, 20, 30, 50)	2 (1~4)	6 (1, 3, 6, 9)	700 (500~Max.)	approx. 73 min.
HEAVY DUTY	30 (Cold water, 20,30,40,60)	50 (10, 20, 30, 50)	3 (1~4)	9 (1, 3, 6, 9)	700 (500~Max.)	approx. 131 min.
SOFT SPIN	30 (Cold water, 20,30,40,60)	30 (10, 20, 30, 50)	2 (1~4)	1 (1, 3, 6)	700 (500~900)	approx. 68 min.
CUSTOM	60 (Cold water, 20,30,40,60)	50 (10, 20, 30, 50)	2 (1~4)	6 (1, 3, 6, 9)	MAX (500~Max.)	approx. 123 min.
BLANKET	— (Cold water, 20 30)	20 (10, 20, 30)	3 (1~4)	6 (1, 3, 6, 9)	700 (500~900)	approx. 78 min.
QUICK	—	10 (10, 20, 30)	1 (1~4)	3 (1, 3)	700 (500~900)	approx. 35 min.
DRY CARE	30 (Cold water, 20 30)	30 (10, 20, 30)	2 (1~4)	6 (1, 3, 6, 9)	700 (500~900)	approx. 73 min.
WOOL	— (Cold water, 20 30)	20 (10, 20, 30)	2 (1~4)	3 (1, 3)	500	approx. 60 min.
WASH	30 (Cold water, 20,30,40,60)	30 (10, 20,30, 50)	—	—	—	approx. 33 min.
RINSE	—	—	1 (1~4)	—	700 (500~900)	approx. 15 min.
SPIN	—	—	—	6 (1, 3, 6, 9)	700 (500~900)	approx. 10 min.
TUB CLEAN	— (Cold water, 20,30,40,60)	50	1	3	700 (500~900)	approx. 75 min.

## NOTES

1. Washing time changes in different water pressure, drain situation, clothes texture, weight, temperature, etc.
2. The needed washing time displayed during operation could be different from the actual time needed.
3. As the quantity of clothes and detergents type are different, rinse result may be not ideal if the spin speed is slow. In this case, add the rinse times.
4. Parameter in the above chart will be different as the machine types are different.
5. When the washing temperature is set as 60°C, washing time increases accordingly.

# CARE AND MAINTENANCE

- Washing machine should be kept in good maintenance during long time of use. Good using habit could extend its service life.
- Pull out the plug when in maintenance, in case of electricity danger.

## Washer body


- Wipe the machine body with soft clean cloth. Dip the cloth into detergents or liquid soap and then clean the machine body when there is heavy dirt on it.
- Do not pour water directly on the machine.
- Do not clean the machine body with scouring powder, diluents, gasoline, alcohol, and other chemical things.

## Sealing washer of the door

Wipe the dirt and fabric scrap away by towel every time after use. If there are things like pin in the groove of the sealing washer, make sure to fetch them out.


## Clean methods of the detergent case

- Clean the detergent case regularly in case that detergent remained in the case get mildew.
- Pull out while lift the case to carry it out, clean it by water and restore it.

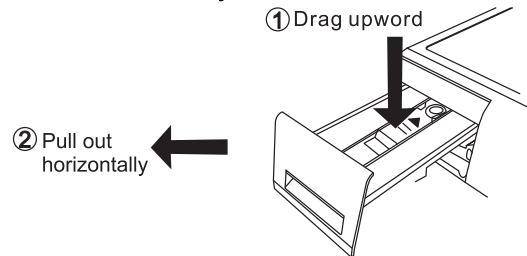


## Clean “ magic ” hose joint filter (Suggest clean it every 6 months)

1. Pull the water inlet hose out.
2. Turn off the revolver according to below photo.
3. Load off the “ Magic ” Hose Joint filter and clean the crud with a toothbrush.
4. Install the clean “ Magic ” Hose Joint filter to revolver and water inlet hose.

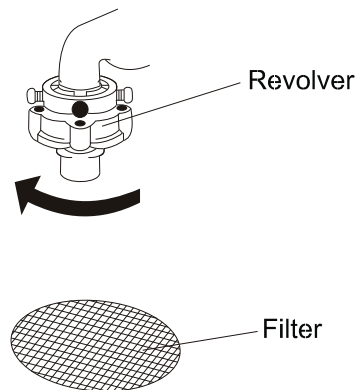

## Clean the water inlet Valve (Suggest clean it every 6 months)

1. Detach the Water Supply Hose from the Water Inlet.
2. Take out the metal filter from the water inlet valve.
3. Clean the metal filter of Water Inlet with a toothbrush etc, then assemble the metal filter in the valve.
4. Connect the Water Supply Hose.
5. The lint must not to be allowed to accumulate around the washing machine (not applicable for appliances intended to be vented to the exterior of the building).

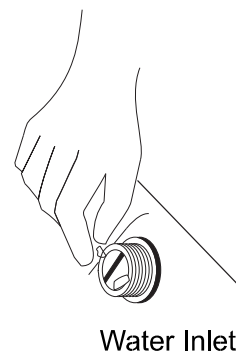


# CARE AND MAINTENANCE


## When the washer be frozen

1. Wrap the faucet and Water Supply Hose joint by hot towel .
2. Dismount the Water Supply Hose and soak it into about 50°C hot water.
3. Pour into the tub about 2~3 liter 50°C hot water.
4. Link the Water Supply Hose, open the faucet and start the machine, check weather the Water Supply Hose and Drain Hose is clogged.


1.

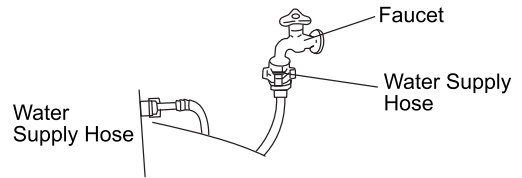

2.

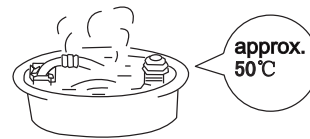

3.

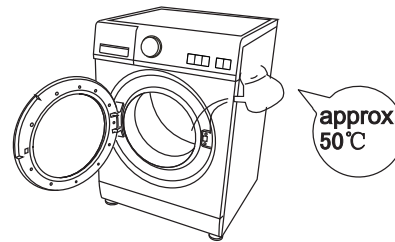

# VARIOUS FUNCTIONS

## CHILD LOCK FUNCTION

Child lock can be set to prevent children from getting into the tub. The door will be locked either in working or power off.

### Method of setting:

After pressing POWER ON/OFF button to power on, press Child lock button for over 4 seconds, until a sound from buzzer. Follow the same instruction listed above to unlock the door.

## HOW TO DELETE THE END BUZZER

If select this function, the buzzer will not sound at the end of operation.

### Method of setting:

Hold down the POWER ON/OFF button and the START/PAUSE button until a sound from buzzer. Follow the above instruction to restart buzzer.

## PRE-WASH FUNCTION

When heavy duty program is chosen, pre-wash function will be added into the program automatically. Before washing process, the machine will pre-wash for a while and drain afterwards. Later, the machine will inlet water again and wash.

## Intelligent unlock function

After running certain programs, if the water level is higher than door bottom level, drain pump will automatically drain water to under the door bottom level. The display will show UP while drain pump is working.

## HOW TO DRAIN REMAINING WATER

Set discharge the residual water after washing machine at the end of the procedure, 9minutes later, once again open the drain valve, eliminate the residual water in the washing machine, the prevention of freezing.

In the power off state, press the " SPIN" button, at the same time as a " POWER ON/OFF" button, switch on the power, press and hold" SPIN" button, until the buzzer sounded. Cancellation of set, repeat the above operation.

# WASHING TIPS

- Check whether there is anything in the pockets (for example: coin, pin, clip, paper, etc).
- Zips shall be zipped close and buttons or hooks shall be fixed. The loose band or ribbon shall be bound together.
- Do not wash colored clothes together.
- Follow the washing guide printed on the clothes' mark or the symbol types of care label by the manufacturer.
- Before first washing, use a white towel dipped in detergents to rub an uneasily discovered place of the clothes for a moment, check whether there is color on the white towel, if the color fades, be careful in washing the clothes.
- If a part of clothes is too dirty, use a towel or soft brush dipped in detergents to rub the dirty part slightly in a same direction. then put the clothes into machine.
- The machine may shock heavily in spin when there is only few clothes or single big and heavy dress, add 2~3 pieces of clothes into the tub to relieve shock.



# NO TROUBLE CONDITIONS

SITUATION	REASON
The washer door can not be opened.	<ul style="list-style-type: none"> <li>• The washer is in operation</li> <li>• Set by the child lock</li> <li>• There is clothes caught between the seal ring and the door.</li> </ul>
Peculiar smell.	<ul style="list-style-type: none"> <li>• Some components are made by rubber, so there may be smell of rubber.</li> </ul>
Little water in wash and spin	<ul style="list-style-type: none"> <li>• Drum washing machine need only little water to wash clothes.</li> </ul>
No water inflow.	<ul style="list-style-type: none"> <li>• Whether the faucet is open.</li> <li>• Whether the Water Supply Hose be frozen.</li> <li>• Whether the Water Supply Hose or the metal filter in water inlet be blocked.</li> </ul>
Inflow of water during operation.	<ul style="list-style-type: none"> <li>• Water will be supplied automatically when the water level decline.</li> <li>• Add clothes during operation.</li> </ul>
Drainage water in during washing.	<ul style="list-style-type: none"> <li>• Whether there is too much detergents, or detergents with too much bubble.</li> </ul>
Remaining time changes	<ul style="list-style-type: none"> <li>• If the washing clothes is in uneven distributed, water will be added to balance it.</li> <li>• The displayed remaining time is calculated on the basis of 15 liter/minute water intake. As the water pressure will change, actual time will be prolonged or shortened accordingly.</li> <li>• If clothes are biased in spin, the spin time will be prolonged to correct the biasing.</li> </ul>
Abnormal sound in spin process.	<ul style="list-style-type: none"> <li>• Check if power cord contact the machine body.</li> <li>• Check if the fixing (bolts) has been removed.</li> <li>• Check if there are any barrettes or metal articles inside.</li> </ul>
Program stops when power off	<ul style="list-style-type: none"> <li>• If power off , the program stops and will not continue when power on, please press the POWER ON/OFF button and re-set the program.</li> </ul>




# TROUBLE SHOOTING GUIDE

Trouble Indication	Kind Of Trouble	Where To Check	How to resolve the problem
	The washer does not work at all.	<ul style="list-style-type: none"> <li>● Check if the Power Cord is securely plugged in.</li> <li>● Press the POWER ON/OFF button.</li> <li>● Press the START/PAUSE button.</li> <li>● Press the PRESET button.</li> <li>● Check whether power failure occurs.</li> <li>● Check whether the fuse or circuit breaker has been activated.</li> </ul>	
E11	Water does not flow into the Wash/ Spin Tub or water flow is slim.	<ul style="list-style-type: none"> <li>● Whether the faucet be opened.</li> <li>● Whether the Water Supply Hose be frozen.</li> <li>● Whether the Water Supply Hose or the metal filter in water inlet be blocked.</li> <li>● Whether the water is out of supply.</li> </ul>	Check and resolve the problem ,then press START/PAUSE for one times to restart the washer.
E12	Water does not drain out.	<ul style="list-style-type: none"> <li>● The height of drain hose is more than 100 mm.</li> <li>● Whether the Drain Hose is inverted.</li> <li>● Whether the Drain Hose is blocked by scrap of fiber.</li> <li>● Whether the Drain Hose is too long.</li> </ul>	Check and resolve the problem ,then press START/PAUSE for one times to restart the washer.
H	Failure of open the washer door.	<ul style="list-style-type: none"> <li>● Whether the temperature of water exceeded 40°C.</li> <li>● Whether the temperature of water in washing process exceeded 40°C.</li> </ul>	The door will open automatically as soon as the temperature below 40°C.
U3	Failure of spin	<ul style="list-style-type: none"> <li>● Whether the washing machine be posited steadily.</li> <li>● Whether the washing clothes is too big or too heavy.</li> <li>● Whether the pieces of clothes for spin is too few.</li> <li>● Whether the blanket be rolled into a ball.</li> </ul>	When the clothes is too little, add 2~3 pieces of clothes, then check the machine, Close the door, and press START/PAUSE button for one times to restart the machine.


# INSTALLATION INSTRUCTIONS

## Transportation


Two people are required in transportation. The washer should be kept upright, each people hold the bottom of one side to move the machine.

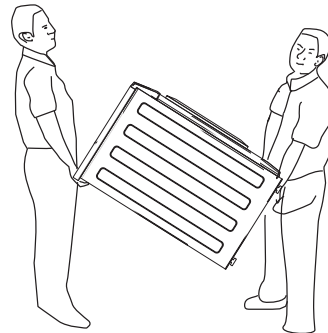


## Location of washer

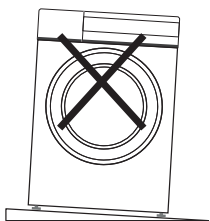

1. On the sloping ground

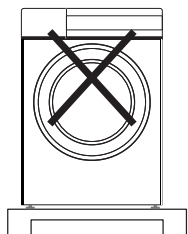

2. On the platform and the bracket

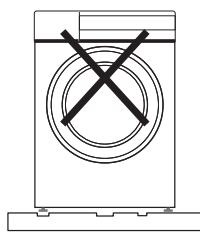



3. On the concavo - convex ground

Washing machine must be installed on the ground which must be hard, flat and skidproof. Please do not lay the washing machine on the soft blanket or wooden floor. It is forbidden to lay the washing machine on the platform or the bracket.

## Remove the bolt used to fix the machine in transportation

To protect the machine in transportation, there are 4 bolts inserted into the inner part of the machine. Remove these bolts before use. (otherwise there will be strong shock, noise, and disfunction in spin process.)

1. Unscrew the bolts that are fixed before transportation by spanner(4 bolts)
  2. Remove the bolts horizontally.
  3. Fit the lid into the holes.
- Let the sales force or professional maintenance worker to install the machine.
  - Keep the dismantled bolts carefully, you will need them in house moving.
  - As the picture shows, please be sure to confirm that the base protection device is not stuck at the bottom of the washing machine before use, otherwise it will affect the normal use of washing machine.

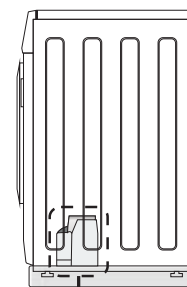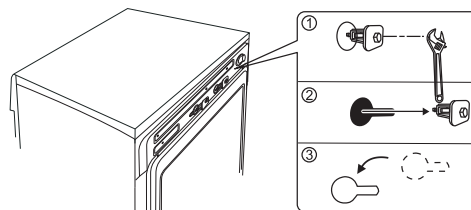




Base protection device

## Adjust the machine horizontally

There will be strong shock, noise, and disfunction in operation if the washing machine is not steadily installed. Please adjust the front adjustable Leg.

### Methods are as follows:


1. Check whether the washer is on a level surface using a plumb line as shown in the Beside figure.
  - The washer is on level ground floor if the Frame line of washer is parallel with the plumb line.
2. Adjust the Adjustable Leg of washer if necessary to make the washer level as shown in the Beside figure.
3. Put your hands on the washer diagonally, press and shake the washer slightly to make sure that the washer is steady.

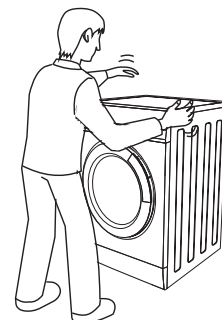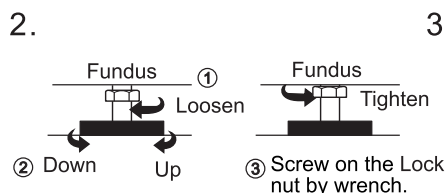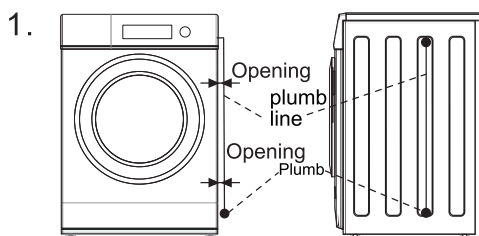

# INSTALLATION INSTRUCTIONS

## How to Attach the "Magic" Hose Joint

1. Loosen the four screws and slide the top of the "Magic" Hose Joint (section A in the figure) onto the faucet. Then, securely tighten the four screws provided with the "Magic" Hose Joint by using a screwdriver to secure the top of the joint to the faucet.
  2. Remove the CAUTION label from the "Magic" Hose Joint.
  3. Turn the male coupler on the joint (section B in the figure) clockwise to attach it securely to the top of the joint (section A in the figure).
- The appliance is to be connected to the water mains using new Water Supply Hose and "Magic" Hose Joint and old hose-sets should not be reused.

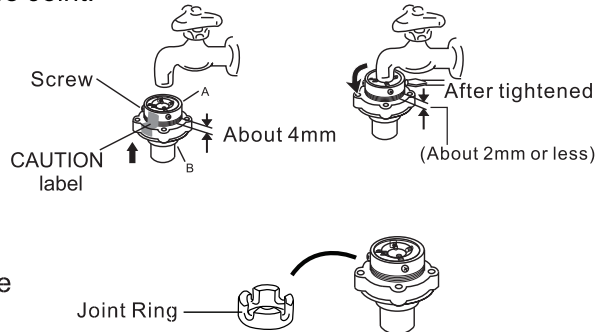

### CAUTION:

If outer diameter of faucet is larger than calibre of the Joint Ring, loosen the four screws and remove the Joint Ring from the "Magic" Hose Joint.  
Do not use water which is hotter than 50°C.  
If your faucet is not suitable, please consult your dealer.

## Attaching the "Magic" Hose Joint to a Faucet


Faucet:

Type A: is the most suitable

Type B: The length of the mouth of the faucet needs to be at least 16mm.


If it is less than 16mm, the "Magic" Hose Joint can not be installed.

Type C: It may cause water leaking.

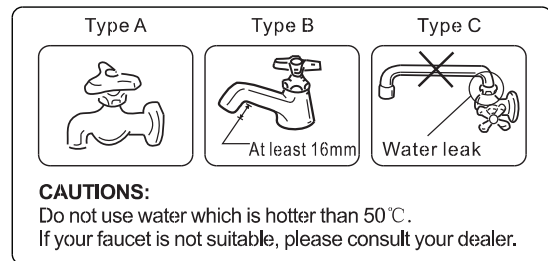


## Installing Water Supply Hose to the Washer

1. Turn the nut clockwise while holding the hose.
- Turn the nut counterclockwise after turning the faucet off when you want to detach the Water Supply Hose.

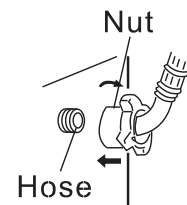

## Connecting the Water Supply Hose to the "Magic" Hose Joint


1. While pushing the sleeve on the female coupler (section D in the figure) of the joint down with your fingers, connect the female coupler to the male coupler (section C in the figure).
2. Release the sleeve, then push the Water Supply Hose up into the "Magic" Hose Joint until it clicks into place.
3. Pull the Water Supply Hose down to make sure that it is securely attached.

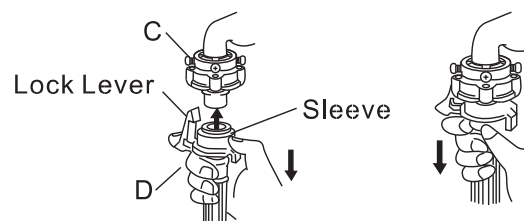

## How to Detach the Water Supply Hose

Please read the following procedure in order to avoid spilling water when detaching the Water Supply Hose.

1. Turn the faucet off.
2. Press the POWER ON/OFF button to turn the power on, the NORMAL button and the START/PAUSE button.
3. Press the POWER ON/OFF button to turn the power off 15 seconds later.
4. While pushing the lock lever and the sleeve on the female (section D in the figure) of the joint down with your fingers, detach the female coupler from the male coupler (section C in the figure).

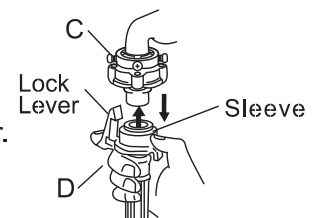


# INSTALLATION INSTRUCTIONS

## INSTALLATION INSTRUCTIONS


### How To Install The Drain Hose

1. Install the Drain Hose to the Drain Outlet (as instructed in the image below), then fix it by Hose Band.
2. Place the other end of the hose to cloacae, keep suitable gap between hose mouth and cloacae for easier draining.

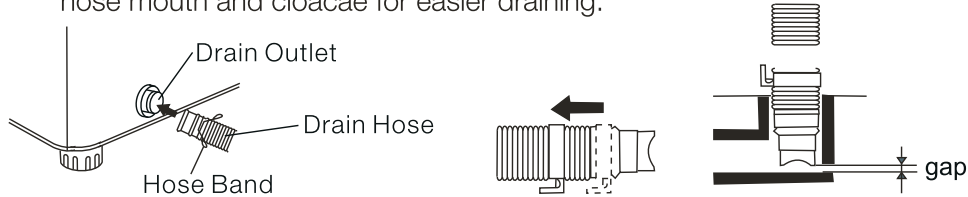

### Extension of the Drain Hose

- Height of middle drain hose should be less than 10cm.
- The length of the drain hose should be less than 3m. If needed; elongate it, but its middle should not be raised up.

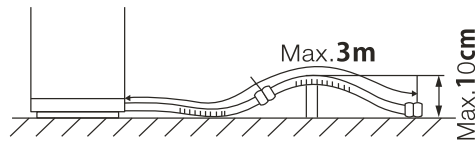

# SPECIFICATIONS

Dimensions	596(W)x600(D)x850(H)mm
Maximum mass of wash cloth	7.0kg
Power Source	220V/50Hz
Rated washing water	90L
Power Consumption(WASH)	100W
Power Consumption(SPIN)	350W
Power Consumption(WARM)	1800W
Required Water Pressure	0.03MPa~0.8MPa

