

SPECIFICATIONS

Dimensions	610(W) x 585(D) x 1000(H) mm
Water level (HIGH)	60 litres
Power Source	AC Local voltage
Power Consumption	400 W
Required Water Pressure	0.03 MPa ~ 1.0MPa (0.3 kgf/cm ² ~ 10 kgf/cm ²)

WARNING - This appliance must be earthed.

FOR WASHER PLUG TOP 3 PIN (For BS Standard Plug With A 13 Amp Fuse) IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:


Green/yellow: Earth Light Blue: Neutral Brown: Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \perp or coloured green or green and yellow.
- The wire which is coloured light blue must be connected to the terminal which is marked with the letter N or coloured white.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured black.

FOLLOWING CAUTIONS ARE FOR WASHER USING DOUBLECORE CORD ONLY.

- If the 2-pin type of socket-outlet has a grounding terminal, securely attach the end of the Grounding Wire to the terminal.
- When grounding the washer, connect the grounding wire before plugging in the Power Cord.
- If the 2-pin type of the socket-outlet has no grounding terminal, consult your nearest dealer or securely attach the end of Grounding Wire to a suitable grounding point, such as a metal cold water pipe.
Never connect the Grounding Wire to a gas pipe.
- Unplug the Power Cord before disconnecting the Grounding Wire.

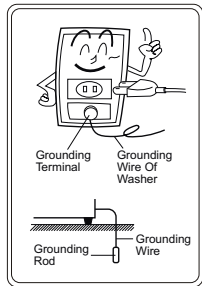

SANYO

SANYO Electric Co., Ltd.


CODE NO.301-6-411S-972-40B

SANYO

INSTRUCTION MANUAL

ASW-A100HT

MICROCOMPUTER CONTROL
FULLY AUTOMATIC WASHING MACHINE

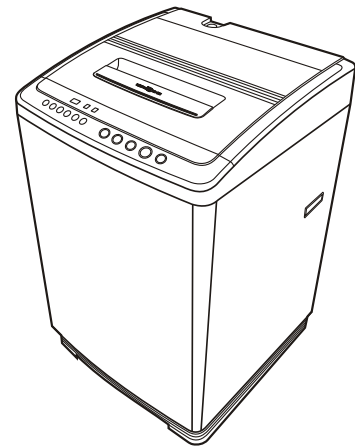

Before operating this washing machine, please read these instructions carefully and completely.








 

CONTENTS

FEATURES	2
WARNINGS	2
ACCESSORIES	3
NAME OF PARTS	3
INSTALLATION INSTRUCTIONS.....	4-6
NAMES AND FUNCTIONS OF CONTROL PANEL	7-8
NORMAL USAGE	9
HOW TO USE THE BLANKET COURSE	10
COURSE CHOOSING GUIDE	11
THE PREPARATION OF LAUNDRY BEFORE WASHING	11
HOW TO USE THE CUSTOMIZED COURSE	12
HOW TO USE PRESET WASHING	13
THREE TYPES OF RINSE.....	14
VARIOUS FUNCTIONS.....	14-16
ULTRASONIC FUNCTION	14
MULTIPLE WATER POWER FUNCTION	14
REMEMBER FUNCTION	15
WATER LEVEL SETTING	15
TWO CLEAN STEPS FUNCTION.....	15
SHOWER RINSE	15
CYCLONE DRY.....	15
HOW TO DRAIN REMAINING WATER.....	16
CHILD LOCK FUNCTION	16
PROCESS CHANGING	16
DELETE THE END BUZZER	16
TROUBLE SHOOTING GUIDE	17
NO TROUBLE CONDITIONS	18
CARE AND MAINTENANCE	18
SPECIFICATIONS	Back Cover


 




FEATURES

- Ultrasonic washing function: completely clean the dirty.
- Multiple water power function: 9 water currents could be adjusted during washing.
- Digital display: easy operation.
- Soft Spin: Anti-crease spin .
- Custom course and remember function.
- Jumbo Stainless Steel inner tub with diameter 460mm: Better washing and spinning.


⚠ WARNINGS

<p>Never put your hand(s) into the Wash/Spin Tub while the washer is operating.</p> <ul style="list-style-type: none"> ● If you reach into the Wash/Spin Tub, it can cause injury. ● If the Wash/Spin Tub dose not stop within 15 seconds after the Washer Lid is opened, turn the washer off immediately and call a service person. 	<p>Be sure to connect Power Plug and Power Cord properly.</p> <ul style="list-style-type: none"> ● Be sure to plug the Power Cord into a proper socket-outlet for the washer. ● An improperly attached plug may catch fire. ● Never disconnect by pulling the cord. Hold the plug as you pull it out. ● Never use a damaged Power Cord.  
<p>Never wash items stained with benzine, kerosene, thinner or gasoline.</p> <ul style="list-style-type: none"> ● It may cause a risk of fire or explosion. 	<ul style="list-style-type: none"> ● Never connect and/or disconnect the Power Plug with wet hands, it may cause an electric shock. ● Wipe the Power Plug with a soft cloth and remove any dust to prevent a risk of the accidental fire before plugging into the socket-outlet. ● Do not plug two Power Cords in one socket-outlet.
<p>Do not allow children to play on or in the washer.</p> <ul style="list-style-type: none"> ● If a child accidentally falls in to the Wash/Spin Tub, serious injury could occur. 	<p>Be sure not to bring any type of flame near the washer or put lit cigarettes or volatile materials on the top of the washer.</p> <ul style="list-style-type: none"> ● It may deform the washer or catch fire, because this washer has a large number of plastic parts. 
<p>Do not install the washer in the bathroom or very humid place.</p> <ul style="list-style-type: none"> ● It may cause a malfunction or an electric shock. 	<p>Do not allow your washer to be repaired by an unqualified service person.</p> <ul style="list-style-type: none"> ● It may cause a risk of accidental fire. ● If the washer operates abnormally, it may cause injury. 
<p>Be sure not to splash or pour water on the Control Panel.</p> <ul style="list-style-type: none"> ● It may cause a malfunction or an electric shock. 	

 ACCESSORIES

Instruction manual	Drain Hose	Water Supply Hose	"Magic" Hose Joint	Bottom Cover	Screw
					


NAME OF PARTS

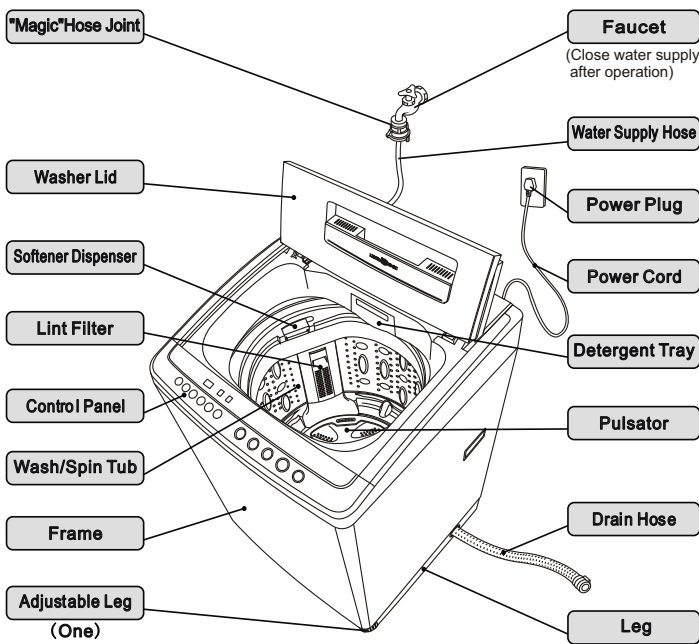

INSTALLATION INSTRUCTIONS

Installing the Bottom Cover

1. Unplug the Power Cord of the washer.
2. Gently lay down the front side of washer on a soft mat or cushion. (Be careful not to dent the Frame.)
3. Insert the attached Bottom Cover into the hooks of Leg by straightly pushing until it reaches into the front hooks.
4. Fasten the Bottom Cover with a screw.
5. Gently set the washer upright.

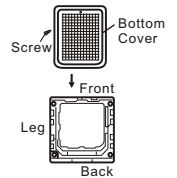


Location of Washer

1. Choose a dry location out of sunlight for the washer.
2. Install the washer on a stable and level surface.



3. Adjust the Adjustable Leg of washer if necessary to make the washer level as shown in the figure.

- The maximum permissible inclination of the supporting surface is 2°.

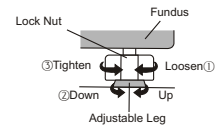


CAUTION:

- Do not block the ventilation openings on the bottom of washer by carpeting when the washer is installed on a carpeted floor.

Attaching the "Magic" Hose Joint to a Faucet

Faucet: Type A is the most suitable

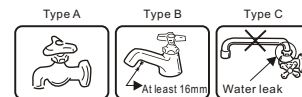

- Type B: The length of the mouth of the faucet needs to be at least 16mm. If it is less than 16mm, the "Magic" Hose Joint can not be installed.
- Type C: It may cause water leaking.

CAUTIONS:

- Do not use water which is hotter than 50°C.
- If your faucet is not suitable, please consult your dealer.

INSTALLATION INSTRUCTIONS

How to Attach the " Magic " Hose Joint

 
1. Loosen the four screws and slide the top of the "Magic" Hose Joint (section A in the figure) onto the faucet. Then, securely tighten the four screws provided with the "Magic" Hose Joint by using a screwdriver to secure the top of the joint to the faucet.
2. Remove the CAUTION label from the "Magic" Hose Joint.
3. Turn the male coupler on the joint (section B in the figure) clockwise to attach it securely to the top of the joint (section A in the figure).

- The appliance is to be connected to the water mains using new Water Supply Hose and "Magic" Hose Joint and old hose-sets should not be reused.




CAUTION:

If outer diameter of faucet is larger than calibre of the Joint Ring, loosen the four screws and remove the Joint Ring from the "Magic" Hose Joint.




Installing Water Supply Hose to the Washer

1. Turn the nut clockwise while holding the hose.
- Turn the nut counterclockwise after turning the faucet off when you want to detach the Water Supply Hose.

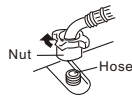

Connecting the Water Supply Hose to the " Magic " Hose Joint


1. While pushing the sleeve on the female coupler (section D in the figure) of the joint down with your fingers, connect the female coupler to the male coupler (section C in the figure).
2. Release the sleeve, then push the Water Supply Hose up into the " Magic " Hose Joint until it clicks into place.
3. Pull the Water Supply Hose down to make sure that it is securely attached.

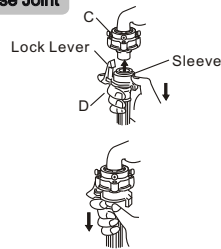

How to Detach the Water Supply Hose

Please read the following procedure in order to avoid spilling water when detaching the Water Supply Hose.

1. Turn the faucet off.
2. Press the POWER ON/OFF button to turn the power on, the NORMAL button and the START/PAUSE button.
3. Press the POWER ON/OFF button to turn the power off 15 seconds later.
4. While pushing the lock lever and the sleeve on the female (section D in the figure) of the joint down with your fingers, detach the female coupler from the male coupler (section C in the figure).

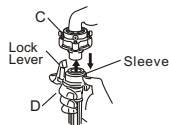


5

INSTALLATION INSTRUCTIONS

Installing The Drain Hose

Set the clip part of Hose Band sideways to prevent touching the Leg. Which may cause a vibration noise.

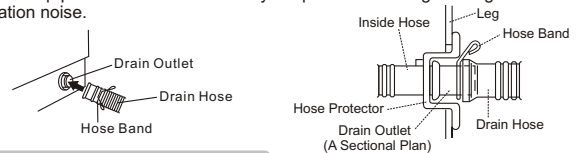


Changing the Drain Hose Direction

You can change the direction from right side to left side.

NOTE:

Put gloves on to prevent injury of your hands when changing the Drain Hose direction.

1. Unplug the Power Cord of the washer.
2. Detach the Back Cover by loosening screws at the back side of the washer. Detach outer Drain Hose and gently lay down the front side of washer on a soft mat or cushion.
- Be careful not to open the Washer Lid and dent the frame.
3. Detach the Cap from the left side of leg.
4. Loosen the Hose Band and pull the inner Drain Hose out of the Drain Valve. Pull the Hose Band out of the inner Drain Hose.
5. Remove right and left Tabs of Drain Outlet one side by another side pushing the Tabs both in side and outside and pull the Drain Hose out toward outside of leg.
6. Let the inner Drain Hose through outside of left hole and set the protrusive guard of inner Drain Hose to the square cutting part of leg, then attach the Drain Outlet of the hose until fitting the Tabs certainly to the leg.
7. Connect the inner Drain Hose to the Drain Valve in place and fix the Hose Band as shown below.

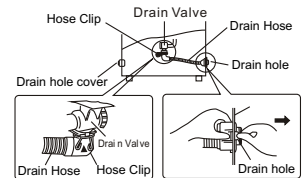

- If you do not attach correct position marked with ▲, it can damage the inner Drain Hose and cause a water leaking through the torn position.
8. Attach the Cap to the right hole.
9. Reattach Back Cover and gently set the washer upright.

Extension of the Drain Hose

When extending the external Drain Hose, please follow the figure below for the length and height.

Extension Hose	Height	Length
No straight	Max. 15cm	Max. 1m
Straight	—	Max. 3m



6

NAMES AND FUNCTIONS OF CONTROL PANEL

DETERGENT Indication

- These are the spoon indications of the DETERGENT volume.
- Refer to "DETERGENT AND LOAD RECOMMENDATIONS" on page 9.

TIMER and PRESET Indicators

- This indicator shows remained time during washing.
(E.g.) Remaining time is 20 minutes
- This indicator shows when the washing is finished during presetting.
(E.g.) Finish washing 2 hours later
- When setting SOAK and WASH process, this indicator shows the time of you set.
(E.g.) Washing time is 10 minutes
- When abnormal conditions occur, the indicator will indicate warning.
(E.g.) Water does not flow

RINSE Indication

- This indicator shows rinsing times and rinsing type.
- "2" means Overflow Rinse.
(E.g.) Two times Overflow Rinse
- Lighting on during Overflow Rinse

SPIN Indication


- This indicator shows spinning time.
- "1." means Cyclone Dry.
(E.g.) Cyclone Dry 1 hour
- Lighting on during Cyclone Dry

POWER ON/OFF Button

- To turn the power on, press the POWER ON/OFF. When you want to turn off the power, press the POWER ON/OFF again.
- When washing has finished, the power will be turned off in 5 seconds automatically. (When you Setting Remained water Draining function, the time is 10 minutes).
 - If you leave the washer turning on without starting the operation, the power will be turned off in 10 minutes by itself.

WATER LEVEL Button CHILD LOCK Function

- You can choose the appropriate water level that matches the load size.
- You can set CHILD LOCK function. Refer to CHILD LOCK function at page 16.
- Different water levels for washing rinsing optional. Detailed operation please refer to Page 15.

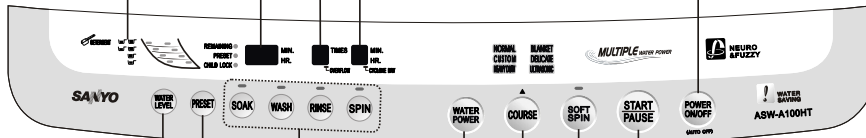

START/PAUSE Button

- This button can be used to start the washer operation.
 - This button can also be used to temporarily stop the washer operation.
 - To restart the washer operation, press the START/PAUSE button again.
- NOTES:**
- This is not a CANCEL button.
 - If you want to delete the End Buzzer, press the START/PAUSE button and hold down for about 4 seconds until beeping stops.

PRESET Button

- Press this button to preset the finish time of washing.
- The number indicated means the finishing time of washing.
- Preset function could not be used for DELICATE course.

PROCESS Button

- The PROCESS Button can be used to set a variety of wash programs.

WATER POWER Button

- Press WATER POWER button to adjust water current during washing or rinsing. Press it once more, the digital indicates "H0 (standard water flow), H1, H2, H3, H4, (stronger. H4 is the strongest); L1, L2, L3, L4 (weaker, L4 is the weakest).
- And this function could not be set for DELICATE or BLANKET course.

COURSE Button


- To choose the washing course, press COURSE button.
- NOTE:**
- If you choose the NORMAL, HEAVY DUTY or CUSTOM course, the washer will automatically begin the NEURO & FUZZY operation.

SOFT SPIN Button

- Press the SOFT SPIN button, the light above flashes.
- After pressing SOFT SPIN, the last 2 minutes spinning will be soft spin, this avoid clothes creasing. (This function cannot be operated the DELICATE and BLANKET course.)

NORMAL USAGE

Procedure

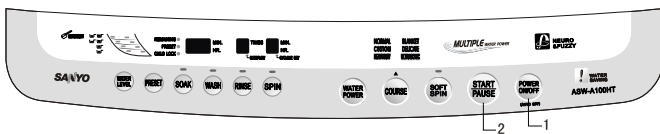

Preparation:

Connect the Drain Hose. Connect the Water Supply Hose to the faucet and turn the faucet on. Plug the Power Cord into a socket-outlet. Load the laundry into the washer.

- Make sure that screws of "Magic" Hose Joint are tighten before opening the faucet. If screws are loose, it may cause water to leak.

1. Press the POWER ON/OFF button.
2. Press the START/PAUSE button.
 - Sensor tests the clothes weight automatically. (For NORMAL, HEAVY DUTY, CUSTOM). Auto choose the proper Water Power, Water Level, Wash and spin time, rinse type.
3. Use recommended amount of detergent as shown in chart.

DETERGENT AND LOAD RECOMMENDATIONS

Water Level								
Water Volume (Approx. L)	16 L	24 L	30 L	36 L	42 L	47 L	54 L	60 L
Detergent Indicators								
Powdered detergent volume (g)	10~25		25~35		35~50		50~70	
Other detergent volume	You may adjust the detergent volume according to the type of detergent-follow recommendations on package.							

- You can use softener, pour the softener slowly to Softener Dispenser before washing.
 - Too much detergent causes poor rinsing and too little detergent causes poor washing.
4. Close the washer lid.
 - The washer will alarm and stop working before spinning if the washer lid is not closed.

HOW TO USE THE BLANKET COURSE

For washing blanket and other bulky items.

- The water level will be changed to 8 automatically when BLANKET course set. While you can adjust it from level 5 to level 8 by hand according to the blanket or the bulky items size.

Procedure

1. Press POWER ON/OFF button and open the washer lid.
2. Press COURSE button continuously and choose the BLANKET course (The BLANKET Light flashes).
3. After the detergent is dissolved with proper amount of warm water (approx. 30°C), pour it into the tub of the washing machine.
4. Fold up the blanket as the method showed in the figures below and put it into the washing tub.
5. Press the START/PAUSE button.
6. Close the washer lid.
 - The washer will stop working automatically before spinning if the washer lid is not closed.
 - The buzzer will alarm at the end of operation and the power will be switched off automatically in 5 seconds.
 - Then please shut water supply and clean the filter.

How to fold up the blanket and put it into the washing tub.


1. Fold in two by the long side
2. Fold 4 times in the same direction
3. Roll up the blanket.
4. Put it into the wash tub with the edge downwards

Wash Finish

Take out blanket and hang it up.


NOTICE:

- Clean the dirty side by hand firstly.
- Use proper volume detergent.
- It is better to clean dirty by warm water (approx. 30°C).
- If the blanket floats out during washing, please press START/PAUSE button, the washer will stop working temporarily. Then, please push the blanket down, and press START/PAUSE again to continue washing.

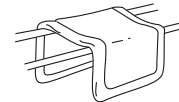

COURSE CHOOSING GUIDE

COURSE	WASH POWER	SUITABLE CLOTHE	OPERATION STATUS FOR THE PROGRAM		
			WASHING TIME(min.)	RINSING TYPE	SPINNING TIME(min.)
NORMAL	Standard	Normal clothes	5~12	Shower Rinse 1 times, Water Saver Rinse 1 times	5~6
CUSTOM	Standard	Kinds of clothes	Soak10 + Wash10	Water Saver Rinse 2 times	5
HEAVY DUTY	Strong	Dirty clothes like working coat	7~14	Overflow Rinse 2 times	7~8
BLANKET	Blanket	Blanket or Bulky	12	Overflow Rinse 2 times	8
DELICATE	Soft	Women underwear, articles with embroider	6	Water Saver Rinse 2 times	2


- Possible the total time is not same due to different water pressure.
- Shower rinse could be changed as Water Saver Rinse .
Please see Page 15 instructions SHOWER RINSE. 

THE PREPARATION OF LAUNDRY BEFORE WASHING





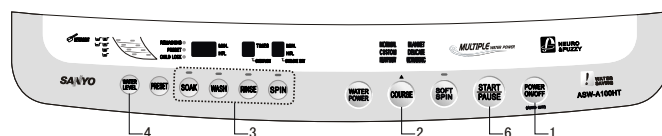


- Make sure that nothing remained in pocket. (Pin, coin or something like possibly damage clothes or washing machine, and the extra noise occurred may cause trouble to washing machine).
- Overturn the clothes to get rid of scraps.
- Wool items like women underwear, articles with embroider, nylon etc, should be placed in a laundry net for extra protection.
- Close the fastener and tie loose laces.
- Brush the dirty parts like dust, sand.
- Put light clothes down. Please pause operation and push it into water when it floats up.
- Please separate washing white clothes from coloured clothes, coats from underwear.

HOW TO USE THE CUSTOMIZED COURSE

You can set WASH, RINSE, SPIN and adjust operating time freely according to your habit or laundry.



Procedure

1. Press POWER ON/OFF button .
2. Press COURSE button to Select the course you want. 
3. Press the PROCESS button to select the process and time .
Press PROCESS button choose your like cycle. The light moves right one by one when press.
 - SOAK time indicating
0 → 5 → 10 → ... → 35 → 40 Min. (This function is not available for DELICATE/ BLANKET course).

 - WASH time indicating
0 → 1 → 2 → ... → 19 → 20 Min.

 - RINSE times indicating
0 → 1 → 1. → 2 → 2. → ... → 4 → 4. (The number means times, “.” Means Overflow Rinse).

 - SPIN time indicating
0 → 1 → 2 → ... → 8 → 9 Min. (Except the DELICATE course).

0 → 1 → 2 → 3 Min. (For DELICATE course).

4. Press WATER LEVEL button, choose proper water level .
 - Putting detergents. 
5. Close the washer lid.
6. press the START/PAUSE button.
 - At the end of working the buzzer will sound
 - The CUSTOM course could be remembered.

HOW TO USE PRESET WASHING


- The preset time means the ending time of washing.
- Before using Preset Washing, please make sure of opening water supply, drain hose to avoid water leakage.

Procedure

1. Press POWER ON/OFF button .
2. Select COURSE or PROCESS as needed.
3. Press the PRESET button to select the time of ending.
4. Select water level if necessary.
 - Putting detergents.
5. Close the washer lid.
6. Press the START/PAUSE button.
 - After the PRESET is started, the corresponding light will be turned on, and other lights get turned off around one minute latter.
 - Preset function could not be used for DELICATE course.
 - To check the Preset procedure, please press PRESET button, the procedure will be indicated for 5 seconds.
 - To cancel the preset, please shut off the power.
 - To change the preset time, please re-preset after cancel of it.


HOW TO USE DETERGENT WHEN PRESET WASH

- You can put powder detergent directly to Detergent Tray or put it directly to wash tub wrapped with handkerchief.
- Pour liquid detergent or bleach to the hole on pulsator. Do not pour it directly to laundry, otherwise possibly cause depigmentation.
- Dilute the Softener with twice water, pour it into Softener Dispenser on the balance ring.
- Do not use Soap since it is difficult soluble.

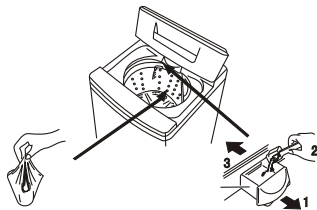


THREE TYPES OF RINSE

1. Water Saver Rinse(Normal)

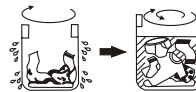


When spin finished, water is added to the level setting and the washer starts rinsing.

2. Shower Rinse(Water Saving)

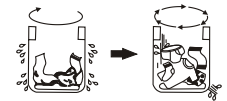

The Wash/Spin tub will start rotating slowly while water is added like shower. The water continuous to drain during this cycle.

3. Overflow Rinse(with excessive detergents)

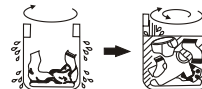

Water is added to the level setting after spinning, then the washer starts rinsing. During this operation, the water still is added continuously to overflow the foam with detergents.

VARIOUS FUNCTIONS

ULTRASONIC FUNCTION

When select ULTRASONIC function, the light of ULTRASONIC is flashes. The washer will brings Ultrasonic during working, and this helps more clean washing and saving detergents.

- Please use less detergents or wash powder when select ULTRASONIC function.
- Cancel method of ULTRASONIC function: Press POWER ON/OFF button to switch on the power, and press WASH button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

MULTIPLE WATER POWER FUNCTION

Press WATER POWER button to adjust water current during washing or rinsing. Press it once more, the digital indicates " H0 (standard water power), H1, H2, H3, H4, (stronger. H4 is the strongest); L1, L2, L3, L4 (weaker, L4 is the weakest). And this function could not be set for DELICATE or BLANKET program.

VARIOUS FUNCTIONS

REMEMBER FUNCTION

When select NORMAL, CUSTOM or HEAVY DUTY, 15 seconds after starting, the machine will remember this program and starts same next time working.

- This function is not available for DELICATE/BLANKET course.
- PRESET and WATER LEVEL will not be remembered.
- The Soak, Wash, Rinse and Spin for CUSTOM program could be remembered.
- The memory will be lost if pull out the plug.

WATER LEVEL SETTING

Washing with low level water and rinsing with high level water will help more clean washing and completely rinsing.

Method of setting

Press WASH button to set wash time, press WATER LEVEL button to set water level for wash, press RINSE button to set rinse type and rinse times. Then press WATER LEVEL to set water level for rinse, press SPIN button to set spin time, press START/PAUSE button to start. By this, wash and rinse will work according to the water levels set separately.

TWO CLEAN STEPS FUNCTION

The washer will start washing when water to the level below 2 levels as set. By this, the washer starts working with more density of detergent.

- This function won't be effected when select level 1 or level 2 water, and DELICATE or BLANKET course.
- When SOAK is selected, this function will not be effected after soaking.

SHOWER RINSE

Under NORMAL, if set 2 times rinses, the first rinse will be shower rinse. If you don't want shower rinse, you can cancel it and it will change to Water Saver Rinse or Overflow Rinse.

Method of setting

Press POWER ON/OFF button to switch on the power, and press RINSE button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

CYCLONE DRY

Method of setting: Press POWER ON/OFF button to switch on the power, and press SPIN button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

VARIOUS FUNCTIONS

HOW TO DRAIN REMAINING WATER

When select this function, in 9 minutes after the working finished, the drainage valve will open to drain out the remained water inside. This will avoid freezing inside and applicable in winter when temperature below 0°C.

Method of setting

Press POWER ON/OFF button to switch on the power, and press SOAK button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

CHILD LOCK FUNCTION

This function avoids child open the washer.

Method of setting

Press POWER ON/OFF button to switch on the power, and press WATER LEVEL button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

- When CHILD LOCK was set, the CHILD LOCK on control panel lights, and indicates E5 and buzzes if washer lid open for 5 seconds during washing.

PROCESS CHANGING

The process no started could be changed during working. No need to switch off the power to re-set the function. For example, you can change rinse times during washing directly.

DELETE THE END BUZZER

If select this function, the buzzer will not sound at the end of working. This is suitable for washing clothes at night.

Method Of Deletion

Press POWER ON/OFF button to switch on the power, and press START/PAUSE button for 4 seconds till a sound from buzzer. To restore it, repeat above or pull out the plug.

TROUBLE SHOOTING GUIDE

WARNING If a malfunction should occur during the washer operation, first check the following items before calling a service-person or dealer.

Trouble Indication

When the following problems occur, the microcomputer will detect the abnormal condition and an electronic buzzer sounds for approximately 10 seconds and the indicators flash as shown below. At the same time, the washer stops operation.

NOTE: The trouble indicators can be released by pressing the START/PAUSE button once if you want to release the emergency stop. Then press the START/PAUSE button again to restart the operation.

Kind of Trouble	Trouble Indication	Where to Check
The washer does not work at all.		Press the POWER ON/OFF button. Press the START/PAUSE button. Press the PRESET button. Check whether power failure occurs. Check whether the fuse or circuit breaker has been activated.
Water does not flow into the Wash/Spin Tub.	E1	Turn the water supply faucet on. Check whether the water supply has been cut off. Check whether the metal filter of the Water Inlet is clogged. Check the washer has been freezing. Check whether water pressure is too low.
Water does not drain out.	E2	Put down the Drain Hose from the hookhole. Check the Drain Hose for any obstructions. Check whether the Drain Hose is clogged. Check whether the Drain Hose rises too high off the ground.
The washer does not spin.	E3	Check whether the laundry is clumped on one side of the Wash/Spin Tub. Check whether the washer is on the level surface.
	E4	Close the Washer Lid.
The buzzer keeps beeping.	E5	Check whether the CHILD LOCK is set. Close the Washer Lid.
Other troubles.	EA EC	Press the POWER ON/OFF button to turn off the power, call your service-person or dealer.

NO TROUBLE CONDITIONS

- During Washing or Rinsing, still there is Water inletting. This is possibly automatic water adding due to water level decrease.
- Spin tub turns or stops timely at the beginning of spinning. This is intermittent spinning for better spin effect.
- No drainage during overflow rinse. This is caused by lower water level set or lower water pressure.
- Water inletting and rinsing sometimes during spinning. This is automatic lean-correction due to clothes is not equally inside.
- There is sound like water flow after spinning. This is the sound of balance liquid in Balance ring. It is for reducing vibration of spinning.
- Control panel keeps warm after power off, this is caused by Remembering circuitry working.
- Power off during working and the washer could not continue working. Should set the program again.

CARE AND MAINTENANCE

Below introducing how to maintain the washing machine

Clean washing machine

Use soft clothing to wipe off the water or dirt on the surface of the washer.

- Detergent, propellant and other chemicals are not allowed to use to avoid the damages on the surface.
- Do not spray water directly to the washer body.



Clean the water inlet Valve

(Suggest clean it every 6 months)


After long time use, the water inlet mesh bag may be blocked with crud, please load off the water inlet hose, take out the water inlet mesh bag from the water inlet valve, clean the mesh bag, then assemble the mesh bag in the valve and load the water inlet hose.



Clean "magic" hose joint filter

(Suggest clean it every 6 months)

- Pull the water inlet hose out.
- Turn off the revolver according to below photo.
- Load off the " Magic " Hose Joint filter and clean the crud with a toothbrush.
- Install the clean " Magic " Hose Joint filter to revolver and water inlet hose

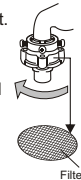

Clean lint filter

(Suggest clean it every week)

- Take out the lint filter.
- Pull out the scraps and wash the lint filter in the water.
- Install the Filter (aim the frame claw to the groove below).
(Lint Filer is easy destroyed parts).

