

E1 High compressor discharge pressure
E2 Freezing of the indoor unit heat exchanger
E3 Low compressor discharge pressure
E4 High temperature of the discharge pipe
E5 Compressor current relay tripped
F0 Indoor air temperature sensor malfunction
Malfunction of the temperature sensor of the heat transfer of the indoor unit
Malfunction of the ambient temperature sensor in the outdoor unit
E6 Switching fault
E8 Motor overload protection tripped int. block
F1 Malfunction of the temperature sensor on the heat exchanger F2 of the outdoor unit
F3
F4 Malfunction of the room temperature sensor