

Aeronik air conditioner error codes

E1 - the pressure in the compressor discharge has increased;

E2 - the heat exchanger of the indoor unit froze;

E3 - the pressure in the compressor discharge has decreased;

E4 - the temperature of the discharge pipeline has increased;

E5 - actuation of the compressor current relay;

F0 - there are malfunctions in the temperature sensor of the air inside premises, in a heat exchanger in an indoor unit or ambient air in an outdoor unit;

F0 - There may also be a freon leak in the indoor unit.

E6 - faults occurred in the commutation;

E8 - the internal block motor is overloaded;

F1 - there are malfunctions in the temperature sensor in the heat exchanger;

F4 - there are malfunctions in the temperature sensor of the discharged in room air.

H1- is not an error. the air conditioner has switched to auto defrosting mode.