

Kentatsu air conditioners KSFU/KSRU76HFDN3, KSFU/KSRU140HFDN3

P4 - thermal protection of the evaporator of the indoor unit

P5 - thermal protection of the capacitor of the external unit

P9 - Defrost or Comfort Airflow Protection

E1 - open or short circuit of the temperature sensor circuit T1

E2 - evaporator temperature sensor T2 closed / disconnected

E3 - temperature sensor capacitor T3 closed / broken

E6 - outdoor unit protection