

Definition of error codes by LED indicators on the air conditioner panel

E2 - malfunction of the room temperature sensor.

E3 - malfunction of the evaporator temperature sensor.

E4 - malfunction of the temperature sensor of the outdoor unit.

E6 - malfunction of the outdoor unit (see indicators on the control board of the outdoor unit).

E7 - EEPROM error

E8 - Excess water level.