

Error codes for air conditioners of the AKH, AKP, AS, BKH, BKP, BS series

F1 FF01 -

F3 FF03 - high condensing temperature in cooling mode

F4 FF04 - high condensation temperature in heating mode

F6 FF06 - incorrect operation of the fan motor of the indoor unit

F7 FF07 - error of the sensor of temperature of internal air

F8 FF08 - Evaporator Temperature Sensor Malfunction

F9 FF09 - condenser temperature sensor malfunction